

NS8100 Firmware Update Instructions 2.20.C

1. Turn graph on and ensure it is not in a monitoring session
2. Connect graph to PC with USB cable (Provided with graph)
3. Unzip Language.zip folder.
4. Navigate to the 'Language folder on the NS8100 drive. (See Figure 1)
5. Delete contents. (See Figure 2)
6. Copy new language files from unzipped folder to 'Language' folder on NS8100 (See Figure 2)
7. Navigate to 'System' folder on the NS8100
8. Copy "Release 2.20.C App.auto" file to folder (See Figure 3)
9. Rename to "App.auto" (See Figure 4)
10. Unplug unit from PC.
11. Ensure graph is fully charged or attached to charger.
12. Press Help menu button.
13. Select "Help Information"
14. Press and Hold "On" and then press "Esc" while continuing to hold "On"
15. Unit will update firmware by itself. Process can take 1-3 minutes.
16. When graph reboots, the system is ready for use. Check "Help Information" to ensure 2.20.C is the firmware version.

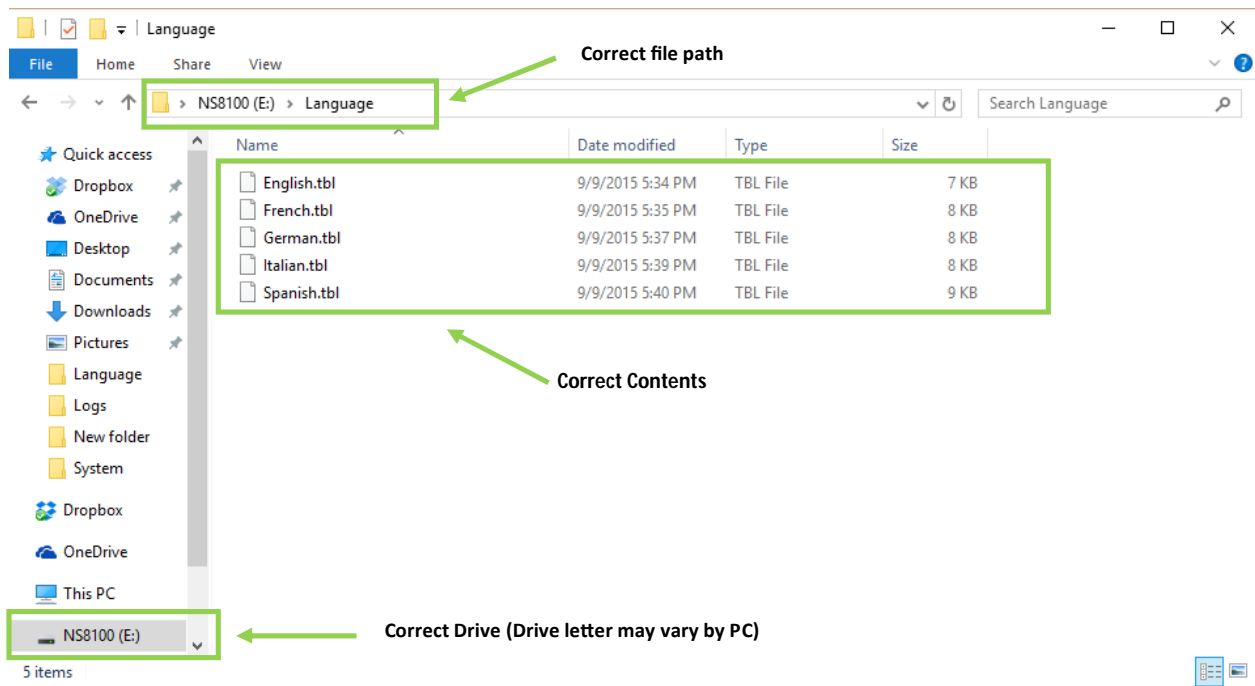


Figure 1. Language folder path and contents

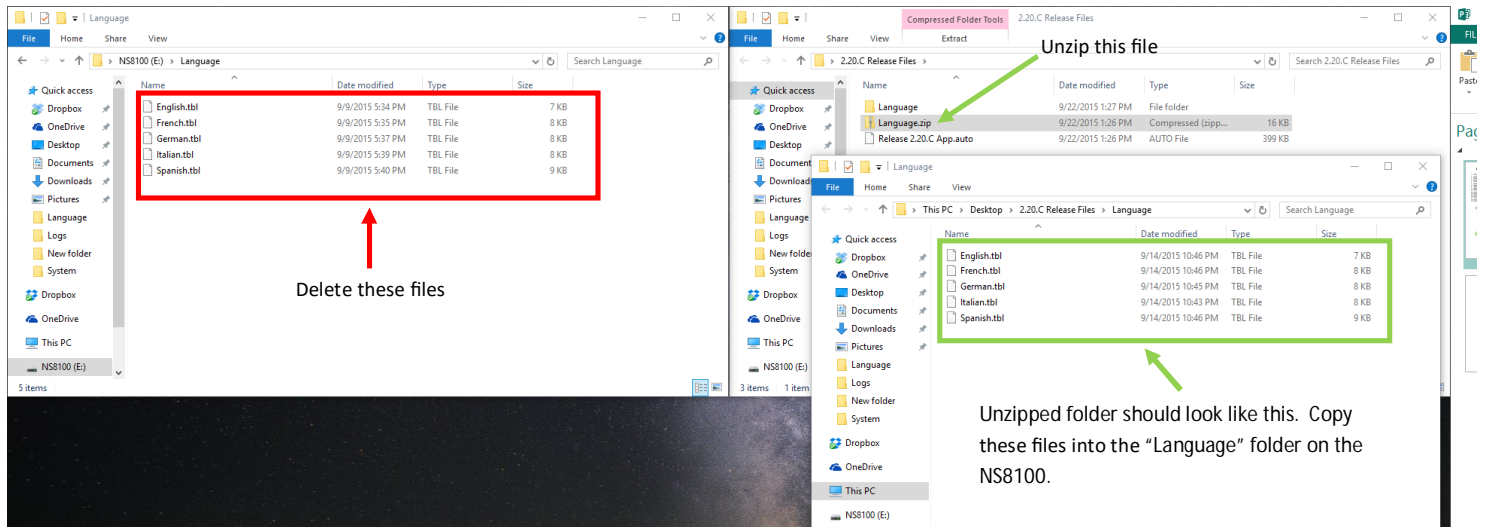


Figure 2. Delete and Move Language Files

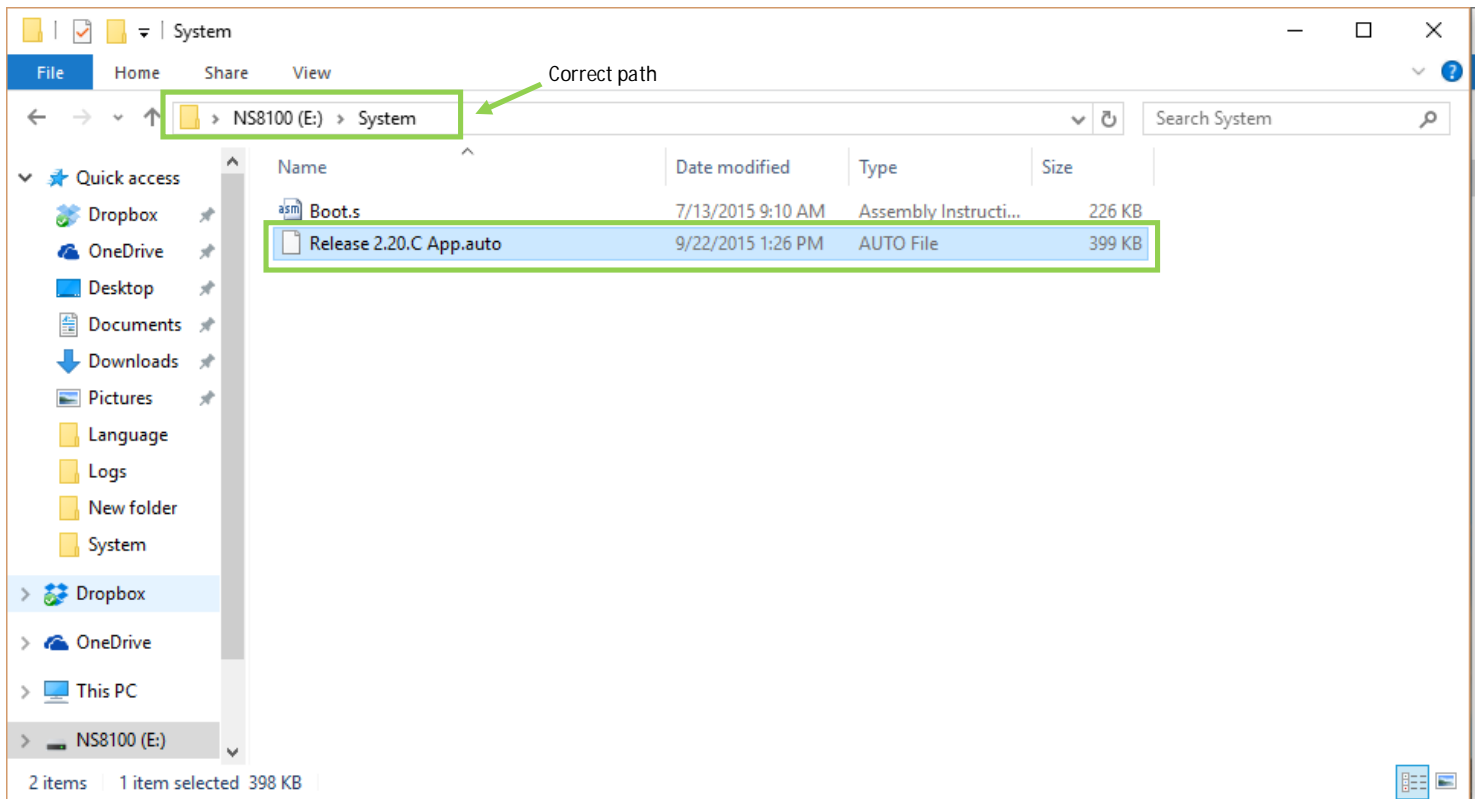


Figure 3. Copy App.auto file to NS8100

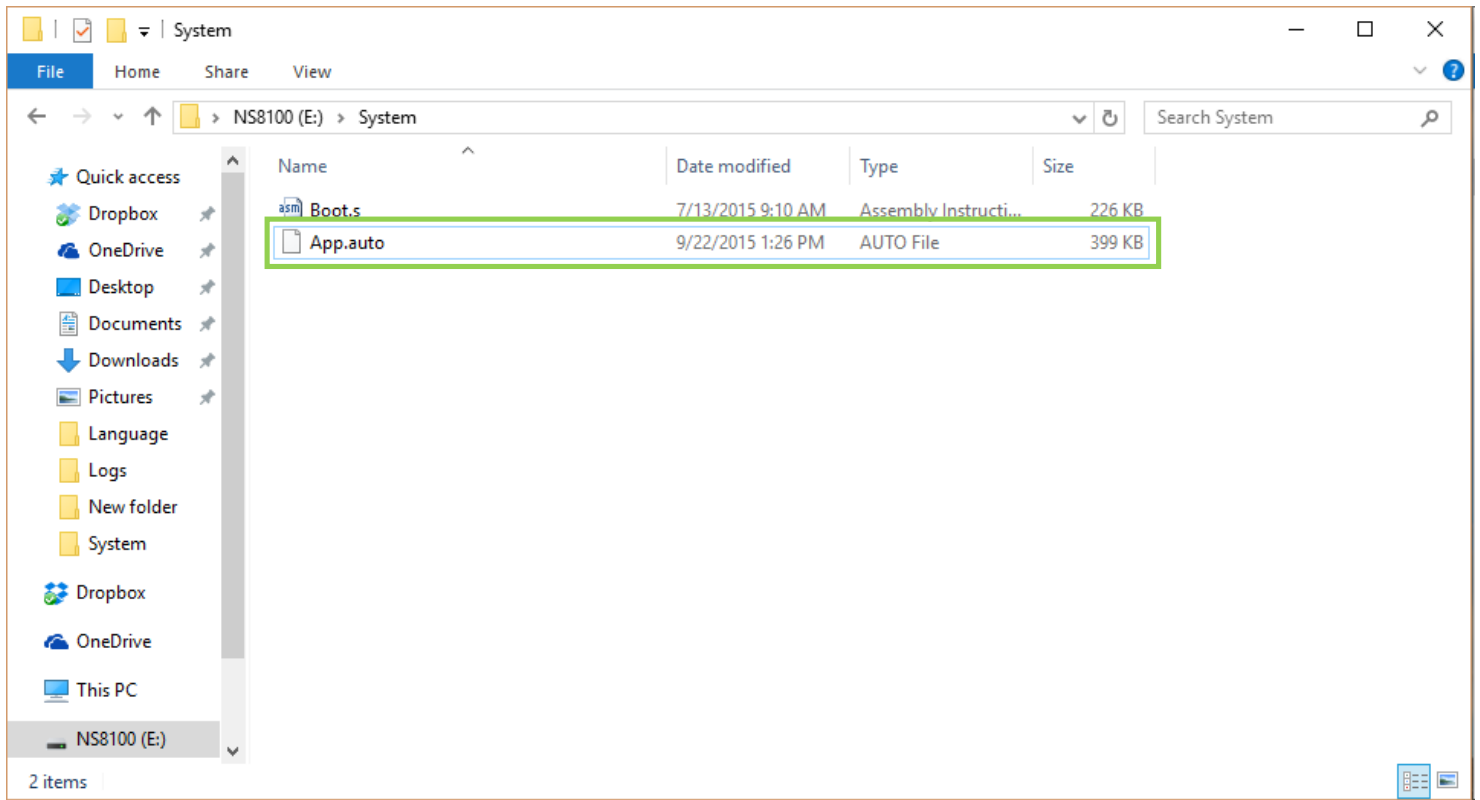


Figure 4. Rename to 'App.auto' file